


- | | | | | | |
|---|----------------------------------|---|----------------------|--|------------------------------|
|  | Waterpump |  | Heater |  | Bottom light |
|  | Air in by side jet |  | Air in by bottom jet |  | Circulation air in |
|  | Sound decrease/
previous song |  | Setting |  | Sound increase/
next song |
|  | Bluetooth |  | Ozone |  | Power |

1. Power

- 1.1 Touch  for 2 seconds to turn on the pool, this also switches on the lights.
hold this button 2 seconds to switch the pool off.



2. Child lock protection

- 2.1 After 5 minutes of inactivity the pool engages the child lock.
The display shows "LOCK". touch and hold any button to unlock, "LOCK" will now disappear from the display.


3. Navigation & lights


- 3.1 If the pool is switched on, use  and  to navigate left or right.
3.2 To switch on the on-or-off make sure the cursor is placed on  and touch .

4. Water pump


- 4.1 The pool is provided with a water level sensor this prevents the water pump from switching on without enough water. This prevents the pump from overheating.
4.2 Touch  to turn on the heater. Touch it again to turn the pump off.
4.3 Double pumps system:
Touch  for the first time to turn on the side jets. Touch it a second time to turn on the bottom jets. Touch it a third time to turn the pumps off.
4.4 When the pumps stop the heater will automatically turn off.
4.5 When the water level sensor detects low water level the pumps stop.
When the water level is fine the pumps will start.

5. Air in by side jet

5.1 Touch  for the first time to open one air valve. Touch it for the second time to open the second air valve. Touch it a third time to close them.




5.2 When the air function is on the display shows .

6. Air in by bottom jet

6.1 Touch  for the first time to open one air valve. Touch it for the second time to open the second air valve. Touch it a third time to close them.


6.2 When the air function is on the display shows .


7. Circulating air in

7.1 When the system is on and the water pump and the air in function are both turned on touch  for the first time to start the air in circulating function. The interval is 3 seconds, and the cycle sequence is as follows :one air valve, two air valves; touch  the for the second time, two air valves starts for 4 seconds, then shut down for 2 seconds, and starts to work for 4 seconds. Touch  for the third time to shut down both air valves.



7.2 The function can be used for bottom and side jets.

8. Bluetooth function

8.1 Touch  for 2 seconds to disconnect the currently connected device and re-enter the pairing state.


8.2 Touch  to turn the Bluetooth function. The display shows BT--C.
Touch it again to turn the function off. BT--C will disappear.

8.3 If the Bluetooth device is not paired successfully the display flashes BT--C.
If it paires successfully the display wont flash.

8.4 Use the navigation buttons to select the song. Touch  for 2 seconds to play or pause the song. Touch  until the display shows VOL. Use the navigation buttons to select the volume.

9. Heater

9.1 The heater can only be used while the massage function is running.

9.2 Touch  to activate the heater function.


Touching the button will shut the heater off.

The default temperature is set to 37°C

The automatic heating: if the water temperature \geq the set water temperature

+1° C, the heater stops. If the water temperature \leq the set temperature -1 ° C, the heater.

The icon is displayed dynamically.

9.3 Touch  and the display shows the temperature value.


Use the navigation buttons to set the temperature.

The temperature is changed in steps of 1°C. If you hold the button the temperature will

change by 1°C every 0,5 seconds. After 5 seconds of inactivity the display will exit the

setting and show the current water temperature.

9.4 Temperature setting range:30°C--45°C.

9.5 Touch  again to turn off the heater.

10. Ozone

10.1 Use the navigations buttons till the cursor is on  and touch it to start the ozone.

10.2 The ozone will be turned off automatically after 10 minutes.